

Nastavitve in uporaba HP4195A

Meritev impedance

CONFIG -> IMPEDANCE

FORMAT -> $|Z|-\theta$ ali R-X

SCALE REF -> SCALE (forA) -> A SCALE (log) -> A AUTO SCALE -> SCALE (forB) -> B SCALE (lin)
-> B AUTO SCALE

Kalibracija

CAL -> CAL menu -> ONE PORT FULL CAL

OPEN -> **ENTER** (odprte sponke)

SHORT -> **ENTER** (kratkostičnik)

LOAD -> **ENTER** (prilagojeno breme)

CAL -> CORRECTION (on)

TRIG/RESET -> CONT mode